

Table 1 - Ocelot™ Parameters

Param Number	Description of Parameter	Values / Usage
1	Bobcat parameter display	<ul style="list-style-type: none"> • 0 = Off • 15 = Bobcat address at 5 and data will display in variable 20, Bobcat address at 6 and data will display in variable 21, etc.
2	Power Mode	<ul style="list-style-type: none"> • 1 = low power mode • 0 = normal mode
3	Max Module address	<ul style="list-style-type: none"> • Highest module # to scan for. This is automatically set after auto addressing modules.
4	Daylight Saving Time Status	<ul style="list-style-type: none"> • 1 = DST in force • 0 = DST not in force
5	Daylight Saving Time Enabled	<ul style="list-style-type: none"> • 1 = Check for DST • 0 = Do not check for DST
6	Reserved	<ul style="list-style-type: none"> • Must be 0
7	Rescan Time	<ul style="list-style-type: none"> • Auto rescan in minutes (0 = OFF)
8	Net Timeout	<ul style="list-style-type: none"> • Time in 1/10ths of sec to wait for module to respond
9	Retry Counter	<ul style="list-style-type: none"> • Give up trying to talk to module after this many retries
10	Reserved	<ul style="list-style-type: none"> •
11	Reserved	<ul style="list-style-type: none"> •
12	Reserved	<ul style="list-style-type: none"> •
13	Not Used	<ul style="list-style-type: none"> •
14	Ocelot™ Master or Slave Address	<ul style="list-style-type: none"> • 0 = Master • 1 or higher = Slave address (Note: All slaves must have an address unique from the other slaves or modules)

Table 1 (Continued) Ocelot™ Parameters

15	Auto X-10	<ul style="list-style-type: none"> • 0 = Off • 1 = On <p>Send X-10 0xFE (RX),hc,kc when X-10 is received. 0xFB (TX),hc,kc when X-10 is transmitted. (hc = house code, kc = key code or unit code)</p>
16	Auto I/O	<ul style="list-style-type: none"> • 0 = Off • 1 = On <p>Send 0xFF if the remote I/O status has changed.</p>
17	Auto IR	<ul style="list-style-type: none"> • 0 = Off • 1 = On <p>Send IR number when a comparison match exists, 0xFD (RX) or 0xFC (TX),IR_ number</p>
18	Send ASCII IR	<ul style="list-style-type: none"> • 0 = Off • 1 = Send ASCII string on IR recognize + T000xxx xxx = IR number recognized.
19	Controller Type	<ul style="list-style-type: none"> • 0 = Ocelot • 1 = Leopard
20	Max IR received	<ul style="list-style-type: none"> • Default = 80 <p>The higher the number the longer the time required to check for an IR match</p>
21	RCS X-10 Thermostat Display	<ul style="list-style-type: none"> • 0 = Off • 1 = On <p>RCS X-10 Thermostat temperature is displayed in variables 64-79 for House codes A-P</p>
22	Reset Variables on Power Up	<ul style="list-style-type: none"> • 0 = All variables reset • 1 or higher = Variable not to be reset on power up <p>Example: 40 = 40-127 not reset on power up</p>
23	Internal Use	<ul style="list-style-type: none"> • Always leave at Zero (subject to change)