# Downloading and installing ADNET™ 2000

1) Go to our web site at [www.appdig.com](www.appdig.com)

2) Click T-Max with your left mouse button.

3) Click the line that reads "**T-Max® Adnet 2000™ Utility Software for Win95/98/NT © 1999 Applied Digital, Inc. *4/25/00** " with your left mouse button.

4) It will prompt you for a location to save the file.
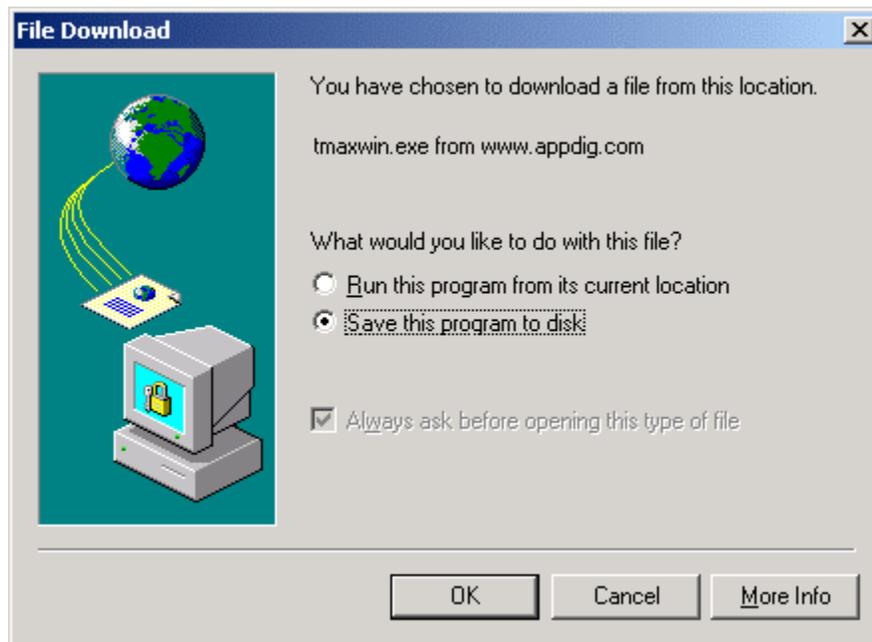


5) Click OK with your left mouse button.

6) The following window will appear:
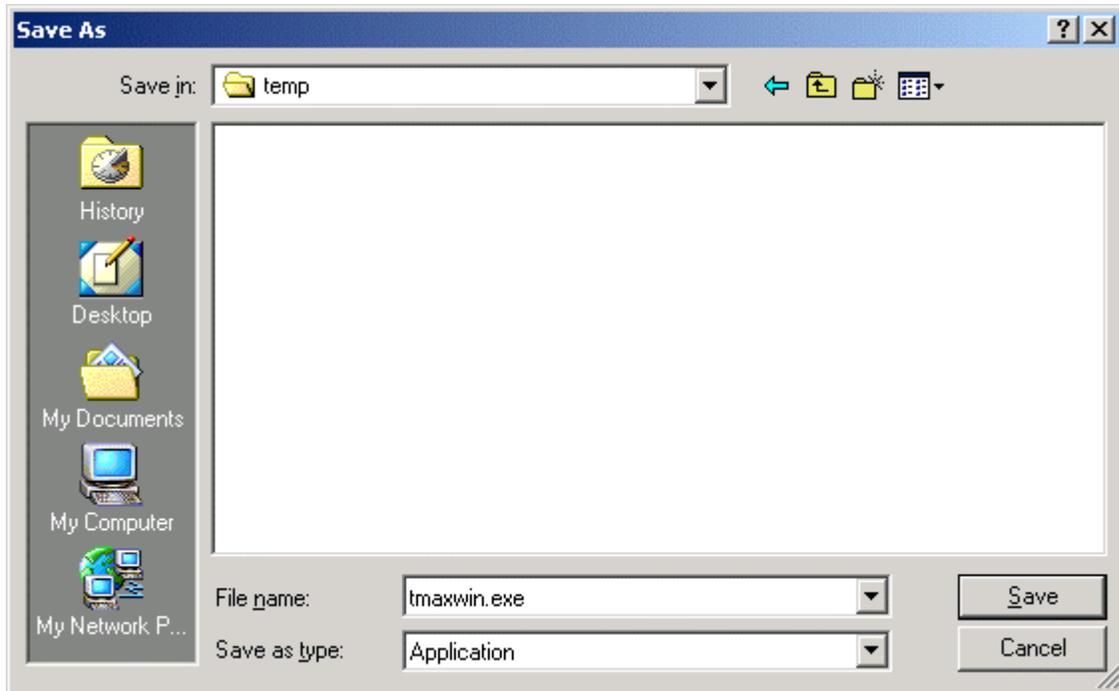
7) Save the file to your computer's hard disk drive. We recommend you save the file to your C:\ directory.

8) Move your mouse over the Start button and Click your Right mouse button. A window will appear. Click Explore with your left mouse button.
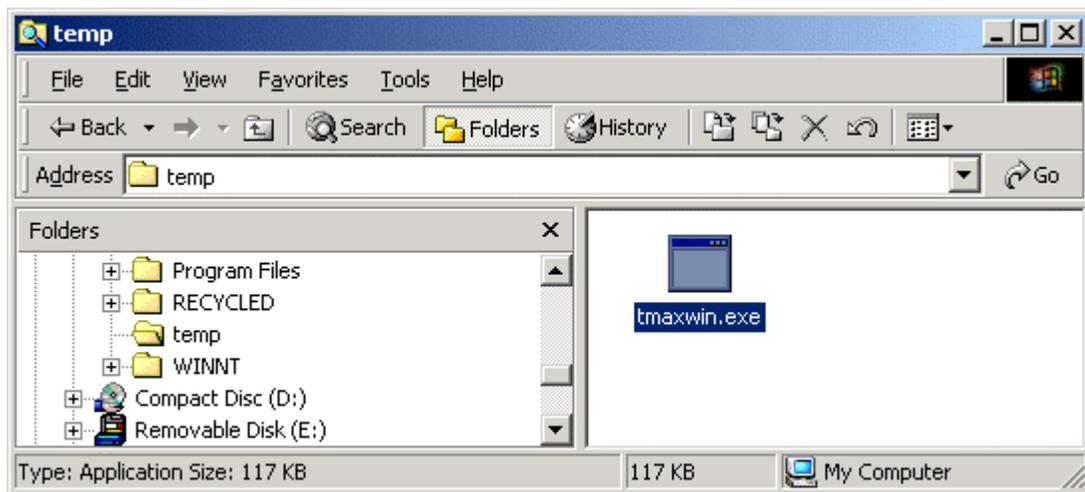


9) Using explorer find the file named TMAXWIN.EXE. It will be in the folder where the file was stored in Step 7. Double click it. The following window will appear:

PKSFX® - C:/adiweb/website/website4-18/tmaxwin.exe

Extract To:
C:\Program Files\ADI\Adnet2000

Drives:
c: ENG3

c:\
Program Files
ADI
Adnet2000

Available:        15,095,360K
Required:              1,159K
Extracted:                 OK
Warnings:                   0

☐ Recreate subdirectories
☐ Display messages
☐ Create program group(s):
☐ Register extension(s):
☐ Run after extraction:

Overwrite
○ Prompt  ● Always  ○ Never

This program was created using PKSFX® for Windows

Extract    Test    About...    Information...    Cancel

10) Click Extract.

11) Use explorer to find the folder Program Files\ADI\ADNET2000.
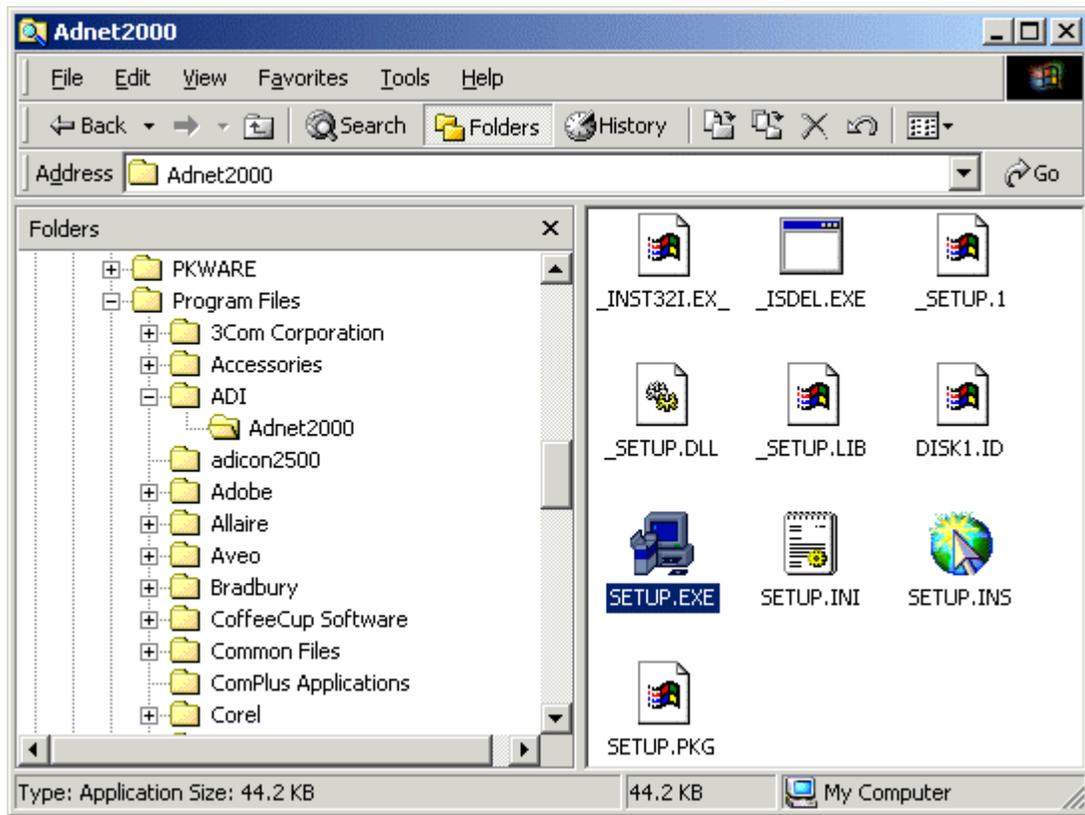
12) Click Setup. The Following screen will appear:
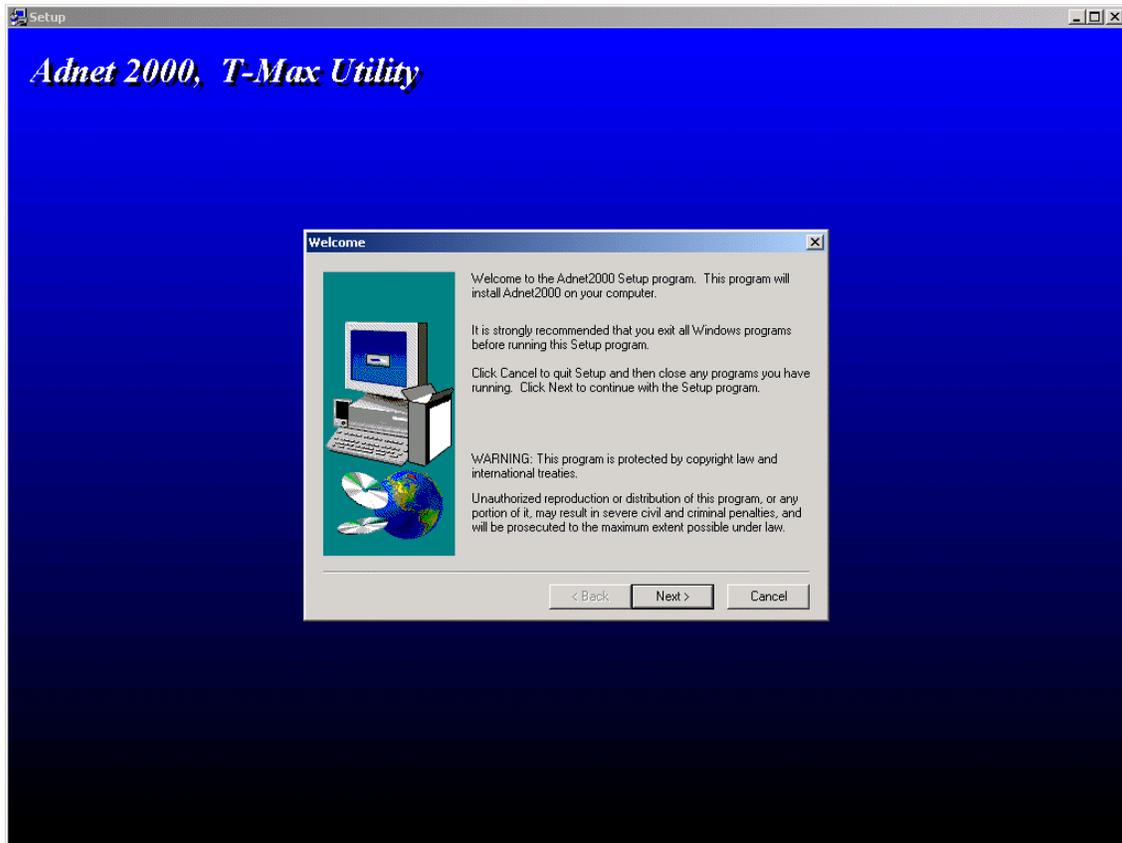
13) Click Next. Follow the instructions on screen.

14) The ADNET2000 is now installed.

15) Refer to the T-Max Manager or T-Max Manager/Pro User's guide for instructions on running ADNET 2000.